


Model 1350G with FC 8800

Brooks Flow Controllers

Variable Area

Flow Controllers for Gas & Liquid Service Model FC 8744, Series FC 8800 & FC 8900

Description

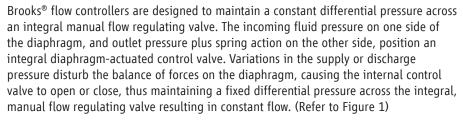

Model FC 8744 controllers are used for accurately adjusting and maintaining small gas and liquid flows with variable downstream pressures.

Series FC 8800 controllers are used for accurately adjusting and maintaining liquid and gas flows with variable upstream pressures.

Series FC 8900 controllers are used for accurately adjusting and maintaining liquid and gas flows with variable downstream pressures.

Product Features

- Flow controllers for high pressure or low flow rates to handle demanding applications
- Integral mounting to flowmeter to save space and improve installation
- High-resolution valves provide precise flow control for many applications
- Many different materials of construction that provides process immunity and flexibility

Product Specifications

Specifications	FC Series Flow Controllers
Flow Ranges (Refer to Table 1)	Water - up to 480 GPH / 1820 l/h
	Air - up to 2130 SCFH / 56000 l _n /h
	H + 4000 - 1400 D D (+ 711 2 2)
Pressure and Temperature Ratings	Up to 1000 psig / 69 Bar. Refer to Table 2a or 2b
	Minimum Operating Temperature: -40°F/C
	Maximum Operating Temprature: Refer to Tables 2a or 2b.
Pressure Drop	Refer to Table 2a.
Pressure Equipment Directive (97/23/EC)	Equipment falls under Sound Engineering Practice (SEP) according to the directive.

(Specifications continued on next page)



Product Specifications (continued)

Specifications	FC Series Flow Controllers
Materials of Construction	
Controller Body	316 Stainless Steel, Brass or Aluminum (FC 8744 only). Refer to Table 3
Controller Diaphragm	Buna-N, Teflon® or Viton® fluoroelastomers. Refer to Table 3.
Needle Valve	316 Stainless Steel Cartridge Valve. Refer to Figure 3. Refer to data sheet DS-VA-CART-eng. 316 Stainless Steel NRS™ Valve. Refer to Figure 2. Refer to data sheet DS-VA-8503-eng. 316 Stainless Steel high flow needle valve type. Refer to Table 3.
O-rings	Viton® fluoroelastomers, Buna-N, Kalrez® (SS body only), EPR (SS body only), Kalrez/Teflon (SS body only). Refer to Table 3.
Dimensions	Refer to Figure 4
Sizing	Refer to Table 4.
Material Certification (Stainless Steel body only)	Certification to NACE MR-01-75; Certification to EN 10204-2.2; Certification to EN 10204-3.1
Ordering Information / Model Codes	Refer to Model Code

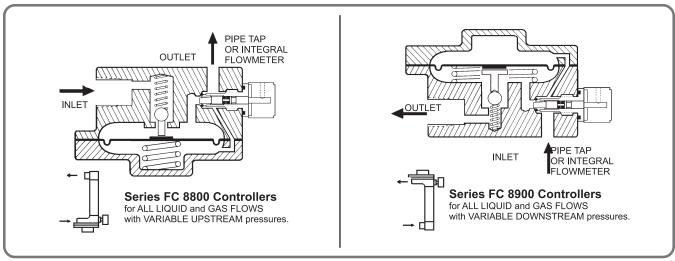


Figure 1 Cutaway View, Principle of Operation

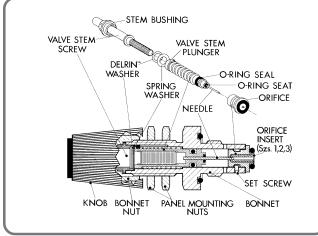


Figure 2 Cutaway View, NRS Valve

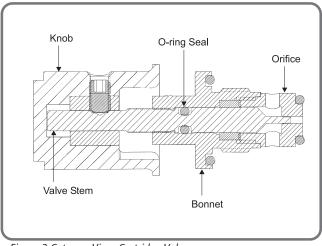


Figure 3 Cutaway View, Cartridge Valve

Product Specifications - Flow Ranges, Pressure / Temperature Ratings & Pressure Drop

Table 1 FC Series Flow Ranges

Flow Rang	es		W	ater		Air @ 0	PSIG/1.01	3 bar abs, 7	70'F/20'C
		I/	h	GI	PH	In	/h	SC	FH
Model	Valve	min	max	min	max	min	max	min	max
FC 8800	Low	0.090	4.5	0.024	1.2	2.6	130	0.10	4.9
FC 8802	Medium	0.29	15	0.077	3.8	8.4	420	0.32	16
FC 8805	High	1.76	88	0.46	23	51	2540	1.9	97
FC 8812 / FC 8815	High Flow	11	570	3.0	151	280	14000	11	532
FC 8840	NRS 1	0.0050	0.25	0.0013	0.066	0.14	7.0	0.0053	0.27
FC 8842	NRS 2	0.0088	0.44	0.0023	0.12	0.32	16	0.012	0.61
FC 8845	NRS 3	0.022	1.1	0.0058	0.29	0.50	25	0.019	0.95
	NRS 4	0.054	2.7	0.014	0.71	2.3	114	0.087	4.3
	NRS 5	0.17	8.7	0.046	2.3	5.2	260	0.20	9.9
	NRS 6	0.70	35	0.18	9.2	18	900	0.68	34
FC 8830	High Flow	136	1820	36	481	3800	56000	145	2130
Flow Rang	es		W	ater		Air @ 10	00 PSIG/7.9	1 bar abs,	70'F/20'C
		I/	h	GI	PH	In	/h	SC	FH
Model	Valve	min	max	min	max	min	max	min	max
FC 8900	Low	0.090	4.5	0.024	1.2	6.8	340	0.26	13
FC 8902	Medium	0.29	15	0.077	3.8	22	1100	0.84	42
FC 8905	High	1.8	88	0.46	23	132	6600	5.0	251
FC 8912 / FC 8915	High Flow	11	570	3.0	151	728	36400	28	1384
FC 8940	NRS 1	0.0050	0.25	0.0013	0.066	0.38	19	0.014	0.72
FC 8942	NRS 2	0.0088	0.44	0.0023	0.12	0.90	45	0.034	1.7
FC 8945	NRS 3	0.022	1.1	0.0058	0.29	1.3	66	0.050	2.5
	NRS 4	0.054	2.7	0.014	0.71	5.8	290	0.22	11
	NRS 5	0.17	8.7	0.046	2.3	13	630	0.48	24
	NRS 6	0.70	35	0.18	9.2	44	2200	1.7	84
FC 8744	NRS 1	0.010	0.25	0.0026	0.066	0.52	26	0.020	0.99
	NRS 2	0.020	0.44	0.0053	0.12	0.98	49	0.037	1.9
	NRS 3	0.040	1.1	0.011	0.29	1.8	91	0.069	3.5

Table 2a FC Series Pressure / Temperature Ratings and Pressure Drop

Body material:	Brass								Stair	nless				Total Pressure Drop*						
Diaphragm material:		Vi	ton			Вι	ına			Vit	on			Tef	lon		lota	ai Press	sure Dr	op"
	Max.	Temp	Max.	Press.	Max.	Temp	Max.	Press.	Max.	Temp	Max.	Press.	Max.	Temp	Max. I	Press.	Mini	mum	Maxi	mum
Model	F	С	psi	bar	F	С	psi	bar	F	С	psi	bar	F	С	psi	bar	psi	bar	psi	bar
FC 8800 / FC 8802	350	178	250	17	180	82	250	17	350	178	300	21	300	149	300	21	10	0.7	300	21
FC 8900 / FC 8902	350	178	250	17	180	82	250	17	350	178	300	21	300	149	300	21	10	0.7	130	9
FC 8805	-	-	-	-	-	-	-	-	-	-	-	-	300	149	1000	69	10	0.7	300	21
FC 8905	-	-	-	-	-	-	-	-		-	-	-	300	149	1000	69	10	0.7	150	10
FC 8812	350	178	250	17	180	82	250	17	350	178	300	21	300	149	300	21	15	1	150	10
FC 8815	-	-	-	-	-	-	-	-	-	-	-	-	300	149	1000	69	15	1	150	10
FC 8912	350	178	250	17	180	82	250	17	350	178	300	21	300	149	300	69	15	1	50	3.5
FC 8915	-	-	-	-	-	-	-	-	-	-	-	-	300	149	1000	69	15	1	50	3.5
FC 8840 / FC 8842	350	178	250	17	180	82	250	17	350	178	300	21	300	149	300	21	8	0.5	300	21
FC 8940 /FC 8942	350	178	250	17	180	82	250	17	350	178	300	21	300	149	300	21	8	0.5	150	10
FC 8845	-	-	-	-	-	-	-	-	-	-	-	-	300	149	1000	69	8	0.5	300	21
FC 8945	-	-	-	-	-	-	-	-	-	-	-	-	300	149	1000	69	8	0.5	150	10
FC 8830	-	-	-	-	-	-	-	-	350	178	300	21	300	149	300	21	25	2	75	5
Body material:		Alum	ninum									-					Tota	l Drag	sure Dr	*
Diaphragm material:		Вι	ına		1												TOLE	ii Fies	sule Di	ob
	Max.	Temp	Max.	Press.	1												Mini	mum	Maxi	mum
Model	F	С	psi	bar													psi	bar	psi	bar
FC 8744	140	60	200	14													10	0.7	150	10

^{*} Maximum pressure based on body material cannot be exceeded by total pressure drop value Notes: The minimum total pressure drop is the minimum pressure needed to reach maximum flow. The maximum total pressure drop is the maximum permitted across the controller.

Table 2b FC Series Pressure / Temperature Ratings CRN


			,	_									
			CRN Pressure Ratings - Flow Controller Model (316 Stainless Steel ONLY - only models shown)										
	Diaphragm Material:	FC8802	C8802 FC8812 FC8842 FC8902 FC8912 FC8942 FC8805 FC8815 FC8845 FC8905 FC8915 FC89									FC8945	
1	Viton		275 ps	sig/19 Bar(g	g) @ 350°F/	/178°C	NOT AVAILABLE						
1	Teflon		275 ps	sig/19 Bar(g	j) @ 300°F/	/149°C		1000 psig/69 Bar(g) @ 300°F/149°C					

Product Specifications (continued)

Table 3 FC Series Materials of Construction / Connection / Valve Option

					Мо	del				
Item	00	02	05	12	15	40	42	45	FC 8830	FC 8744
Body/Diaphragm/Valve Seat & O-ring										
Brass/Viton	Χ	Х	-	Х	-	Х	Х	-	-	-
Brass/Buna/Buna-N	Χ	Х	-	Х	-	Х	Х	-	-	-
SS/Teflon	Χ	Х	Χ	Х	Χ	Х	Χ	Х	Х	-
SS/Viton	Χ	Х	-	Х	-	Х	Χ	-	Х	-
Alum/Buna-N	-	-	-	-	-	-	-	-	-	Х
Connection Size and Type										
1/4" F-NPT	Χ	Х	Χ	Х	Χ	Х	Х	Х	-	-
1/8" F-NPT	Χ	Х	Χ	-	-	Х	Х	Х	-	Х
1/8" Tube Compression	Χ	Х	Х	-	-	Х	Х	Х	-	Х
1/4" Tube Compression	Χ	Х	Χ	Х	Χ	Х	Х	Х	-	-
1/4" I.D. Hose	Χ	Χ	-	Х	-	Х	Χ	-	-	Х
3/4" F-NPT	-	-	-	-	-	-	-	-	Х	-
Integral 5/16-24 UNF Thd	-	-	-	-	-	-	-	-	-	Χ
Integral connection for 1350/55 - one end	Χ	-	-	-	-	Х	-	-	-	-
Filter										
Filter - inlet	Χ	Х	Х	Х	Χ	Х	Х	Х	-	Х
Filter - inlet & outlet	-	-	-	-	•	-	-	-	-	Х
Valve Type										
Cartridge valve	Χ	Х	Х	-	-	-	-	-	-	-
NRS Valve	-	-	-	-	-	Х	Х	Х	-	Х
High Flow Needle Valve	-	-	-	Х	Χ	-	-	-	Х	-
No Valve	Χ	X	Х	-	-	Х	Х	Х	-	Х

Table 4 Sizing Chart

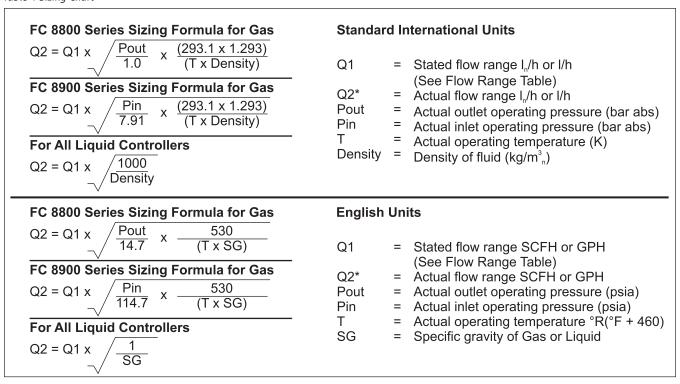

^{*}FC 8800 Series Downstream Flow, FC 8900 Series Upstream Flow

Product Dimensions

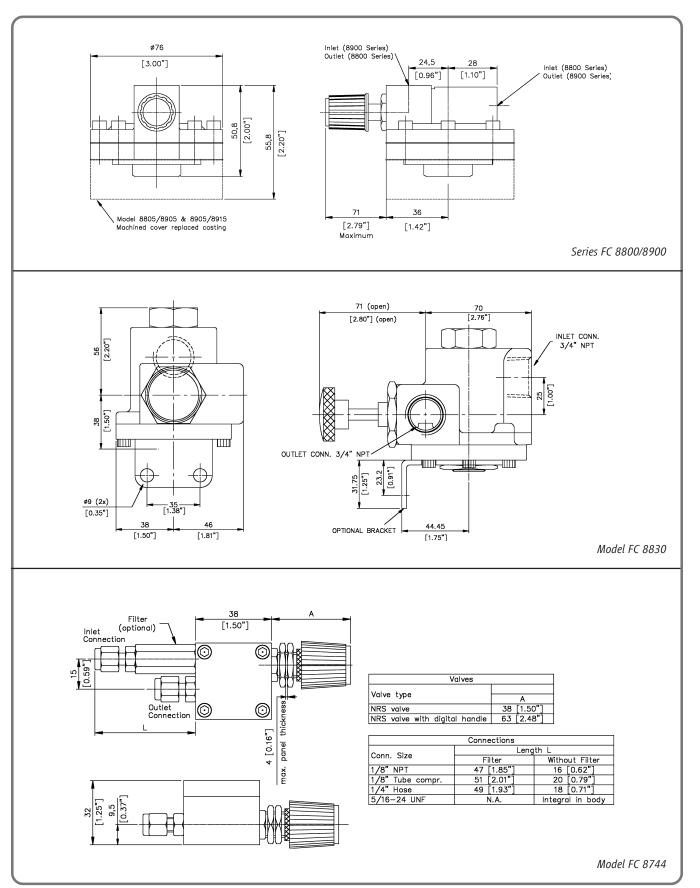


Figure 4 Flow Controller Dimensional Drawings

Model Code

Base Model Number I. Type of Use	FCA87 FCA88 FCA89 00 02 05	Low flow gases and liquids with variable downstream pressure Gases and liquids with variable upstream pressure Gases and liquids with variable downstream pressure General use, standard operating pressure, integral connection to Models 1350 & 1355
I. Type of Use	00 02 05	Gases and liquids with variable downstream pressure General use, standard operating pressure, integral connection to Models 1350 & 1355
II. Type of Use	00 02 05	General use, standard operating pressure, integral connection to Models 1350 & 1355
II. Type of Use	02 05	
	02 05	
	05	General use, standard operating pressure, integral NPT connections
		General use, high operating pressure, integral NPT connections
	12	High flow rates, standard operating pressure, integral NPT connections
	15	High flow rates, high operating pressure, integral NPT connections
	30*	Very high flow rates, standard operating pressure, integral NPT connections
	40	Precise control, standard operating pressure, integral to recommections 1350 & 1355
	42	Precise control, standard operating pressure, integral Connections Precise control, standard operating pressure, integral NPT connections
	45	
	44*	Precise control, high operating pressure, integral NPT connections Very precise control, low operating pressure, adapters required
H. D. I. M I.		
II. Body Material	A*	Brass
	В	316 Stainless Steel
	C*	Aluminum - FC 8744 only
	D	316 Stainless Steel - CRN
V. Diaphragm Material	1	Viton
	2	Teflon
	3*	Buna
V. O-ring Material	Α	Viton
3	В	Buna
	C	Kalrez - Stainless Steel body only
	D	Kalrez/Teflon - Stainless Steel body only
	E	EPR - Stainless Steel body only
	Y	Not applicable
VI. Process Connection Size & Type	1	1/4" FNPT
71. Trocess connection size & type	2	1/8 FNPT
	3	1/8" Tube Compression
		1/4" Tube Compression
	5*	1/4" I. D. Hose
	6*	3/4" FNPT
	7	Integral 5/16-24 UNF Thd
/II. Valve Configuration	Α	Cartridge Valve, Low Flow
	В	Cartridge Valve, Medium Flow
	С	Cartridge Valve, High Flow
	D	NRS Needle Valve, Size #1 (316 SS only)
	E	NRS Needle Valve, Size #2 (316 SS only)
	F	NRS Needle Valve, Size #3 (316 SS only)
	G	NRS Needle Valve, Size #4 (316 SS only)
	Н	NRS Needle Valve, Size #5 (316 SS only)
]	NRS Needle Valve, Size #6 (316 SS only)
	L	High Flow Needle Valve
	Υ	No Valve
/III. Valve Option	0	Knob only
X. Filter	A	None
	В	Filter on Inlet
	С	Filters on Inlet & Outlet
X. Mounting Configuration	0	None
	1	Mounting Bracket, Plated Steel (standard) Note: N/A FC 8744

^{*} CRN NOT AVAILABLE

(Model Code continued on next page)

Sample Standard Model Code (Fields incomplete)

	II	III	IV	V	VI	VII	VIII	IX	Х	XI	XII
FCA88	00	В	1	Α	1	D	0	Α	0		

Model Code (Continued)

Code Description

Code Option Option Description

XI. Material Certifications	Α	None			
	В	Certification to NACE MR-010-75			
	С	Material Certification EN 10204-2.2			
	D	Material Certification EN 10204-3.1			
	E	Certification to NACE & Material Certification EN 10204-2.2			
	F	Certification to NACE & Material Certification EN 10204-3.1			
XII. Additional Cleaning	1	Standard Cleaning Process			
	2	Degrease and Clean for Oxygen Service			

^{*} CRN NOT AVAILABLE

Sample Standard Model Code (Fields complete)

	II	III	IV	V	VI	VII	VIII	IX	Х	ΧI	XII
FCA88	00	В	1	Α	1	D	0	Α	0	Α	1

Brooks Service and Support

Brooks is committed to assuring all of our customers receive the ideal flow solution for their application, along with outstanding service and support to back it up. We operate first class repair facilities located around the world to provide rapid response and support. Each location utilizes primary standard calibration equipment to ensure accuracy and reliability for repairs and recalibration and is certified by our local Weights and Measures Authorities and traceable to the relevant International Standards.

Visit www.BrooksInstrument.com to locate the service location nearest to you.

START-UP SERVICE AND IN-SITU CALIBRATION

Brooks Instrument can provide start-up service prior to operation when required. For some process applications, where ISO-9001 Quality Certification is important, it is mandatory to verify and/or (re)calibrate the products periodically. In many cases this service can be provided under in-situ conditions, and the results will be traceable to the relevant international quality standards.

CUSTOMER SEMINARS AND TRAINING

Brooks Instrument can provide customer seminars and dedicated training to engineers, end users, and maintenance persons.

Please contact your nearest sales representative for more details.

HELP DESK

In case you need technical assistance: Americas 1 888 554 FLOW Europe 1 +31 (0) 318 549 290 Asia 1 +81 3 (0) 5633 7100

Due to Brooks Instrument's commitment to continuous improvement of our products, all specifications are subject to change without notice.

TRADEMARKS	
Brooks	Brooks Instrument, LLC
All other trademarks are the property of t	heir respective owners.



Brooks Instrument
407 West Vine Street
P.O. Box 903
Hatfield, PA 19440-0903 USA
T (215) 362 3700
F (215) 362 3745
E-Mail BrooksAm@BrooksInstrument.com
www.BrooksInstrument.com

Brooks Instrument
Neonstraat 3
6718 WX Ede, Netherlands
T +31 (0) 318 549 300
F +31 (0) 318 549 309
E-Mail BrooksEu@BrooksInstrument.com

Brooks Instrument ITW Japan Ltd. 1-4-4 Kitasuna Koto-Ku Tokyo, 136-0073 Japan T +81 3 5633 7100 F +81 3 5633 7101 E-Mail Sales-Japan@BrooksInstrument.com

